

Thank you for buying Dadahack's TAP3  
Here is the FAQ.

Questions:

1. [Where is the on switch?](#)
2. [How do I charge the TAP3?](#)
3. [How long should I charge it for?](#)
4. [How do I copy music files to the device?](#)
5. [How do I listen to the device with headphones?](#)
6. [How do I play the device in a tape-deck?](#)
7. [Does FF and RWD really work?](#)
8. [What's the EQ button all about?](#)
9. [What size SD card can I use in the device?](#)
10. [Does the TAP3 device play other music files?](#)
11. [How long does the battery last on one charge?](#)
12. [Did we miss anything?](#)

Answers:

a.1 On the right-hand side if you are looking at the yellow stripe, and the playback head is at the bottom. Slide the button up to turn the TAP3 on. The device won't do anything except look good if this is off.

a.2 By switching the device on (see a.1) and plugging a mini usb-cable to the port on the left-hand. Plug the other end into a computer or smart-phone / iPhone / iPod charger. Many smart-phones have mini-usb chargers.

a.3 As long as you want. At least an hour would be a good idea.

a.4 Turn the device on. Connect the TAP3 to your computer with a mini-usb cable. The SD card in the device should mount and you can copy mp3 files onto the SD card. Look at the SD card contents and see if we've put any extra goodies on there.

a.5 Turn the device on. Plug in your favourite headphones to the mini-jack headphone socket on the left-hand side. Hold down the play button for a second. When the red light starts flashing, you'll be able to hear the music play.

a.6 Turn the device on. Hold down the play button for a second. When the red light starts flashing place it in your tape-deck and press play. Music will come out of the speakers.

a.7 Kind of. Press FF on your tape-deck and the music will skip forward one track. RWD does the opposite. Sometime (we don't know why) these functions are swapped.

a.8 It's a built in EQ which makes the music worse if you press it. Don't press it, it's rubbish.

a.9 We've tried a 1gb, 2gb and 4gb SD card. You could try something else if you like, but we don't think SDHC will work.

a.10 The TAP3 only plays mp3 files. We've put 320k files on the SD card for your high quality listening pleasure.

a.11 Surprisingly long. Longer than an iPhone. More like an old Nokia.

a.12 Probably. Suggestions on an email to [info@dadahack.com](mailto:info@dadahack.com)

[Back to the questions](#)